

Operation Instruction

- When the visitor presses the button on the outdoor unit (more than one second), graceful melodies from indoor unit will be heard and the visitor's image will be shown. Press TALK button on the indoor unit for intercommunication. Time delay for talk and image is around 120s.
- Press UNLOCK button for door open.
- Press MONITOR button to monitor the outside. Time will last 40s.
- Press MONITOR button and TALK button, then communicate with the guest. Press TALK button again for close.
- Turn the knob to adjust the indoor unit's brightness, chroma and volume for best performance.
- Eight chord melodies for option.

Warning

- Do not install the indoor unit in a place with high temperature and high humidity or near to TV.
- Do not touch the kinescope with wet hands.
- Use the soft cloth to clean the camera and screen for best view. Corrosive and volatile liquid, detergent and thinner are forbidden.
- Do not throw or hit the units.
- For best view, strong and direct sunshine for camera is forbidden.
- The image could be illegible for wireless interruption.

