




RL-618C10A Indoor Unit User Manual

Technique Parameter

- Talk time: 60s
- Monitor time: 60s
- Monitor screen : 7" TFT
- Operating voltage: DC +15V
- Operating current: <400mA
- Standby current: <35mA
- Installation: surface mou

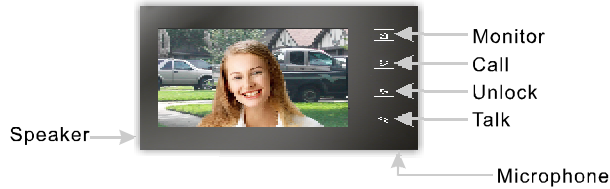

- Touch pannel design.
- Hand-free intercommunication.
- Electric-controlled unlocking.
- Monitoring the outdoor.
- Keypad tone and busy line reminder.
- Direct call to center unit
- 16-chord chimes for option.
- Adjustable talk volume.

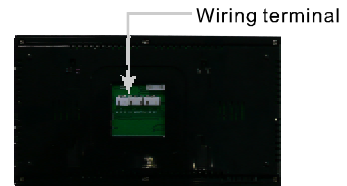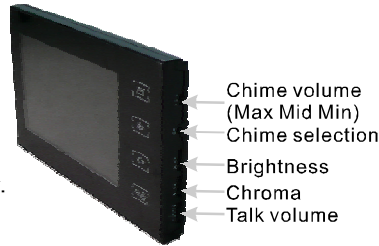

Setting Room Number for Master Unit

Below operation should be done within 30 seconds after power on.

- 1) Power on the system, hold UNLOCK for 3 seconds and then release when "Beep" sound is heard, it comes to household number registration mode (no other operation is allowed before entering this mode).
- 2) Enter the unit number on outdoor station, a chime sounds from indoor unit after 3 seconds.
- 3) Hold UNLOCK again for 3 seconds and then release when "Beep" sound is heard, it means the registration is completed.

Note: The master unit number should not begin with "00".

Setting Room Number for Sub-Unit

In one household, there should be only one established MASTER unit. The remaining units should be set as sub units.

Below operation should be done within 1 minute after power on

- 1) Power on the system, hold TALK for 3 seconds and then release when "Beep" sound is heard, it comes to household number registration mode (no other operation is allowed before entering this mode).
- 2) Enter the unit number on outdoor station, a chime sounds from indoor unit after 3 seconds.
- 3) Hold TALK again for 3 seconds and then release when "Beep" sound is heard, it means the registration is completed.

Operation:

Visitor presses CALL button, a chime sounds and visitor's image appears on indoor unit, you can touch TALK to talk with the visitor; touch UNLOCK to open the door then the monitor screen will be turned off; touch MONITOR button once to monitor the first outdoor unit; press it twice to monitor the second outdoor unit; and press it third to turn off the screen. On monitor or talk mode, press UNLOCK button to release the corresponding outdoor unit. Touch CALL CENTER UNIT button to call and talk with the center unit. If another indoor unit is talking with outdoor unit or center unit, there will be busy line reminder when touching MONITOR or CALL CENTER UNIT buttons. Select melody rings in monitoring mode. Brightness, chroma and volume can be adjusted by the knobs at the right side of indoor unit for best performance.

Wiring:

